

We build the Nightforce MIL-SPEC product line to give the warfighter the peace of mind that their riflescope will perform reliably, repeatedly, and without fail, when conditions of battle are at their worst.

2

4

6

8

**Nightforce Optics, Inc.**  
Military, Government & Law Enforcement  
Business Development  
1087 E. Franklin Street, Suite D  
Hartwell, GA 30643  
tel 706.377.3186 • fax 706.377.3187  
www.nightforceoptics.com  
Militaryinfo@nightforceoptics.com

**Factory/Headquarters USA:**  
Nightforce Optics, Inc.  
336 Hazen Lane  
Orfino, ID 83544

**Technical & Warranty:**  
tel 208.476.9814  
fax 208.476.9817



**NIGHTFORCE™**

© Nightforce Optics, Inc. 2011 11/11

The information contained herein is accurate at time of printing, and is subject to change without notice. We are not responsible for typographical errors or omissions.



OWNER'S MANUAL/MIL-SPEC RIFLESCOPES



**NIGHTFORCE™**

RUGGED. RELIABLE. REPEATABLE.™

# Contents

- Focusing the reticle ..... 2
- Parallax adjustment ..... 3
- Click values ..... 4
- Reticle illumination ..... 5
- Installing the riflescope ..... 7
- Mounting the riflescope ..... 8
- Leveling the reticle ..... 9
- Establishing a close-range zero ..... 10
- Zeroing adjustments ..... 11
- ZeroStop™ adjustments/Full size ..... 12
- ZeroStop™ adjustments/Compact ..... 14
- Caring for your riflescope ..... 16
- Warranty information ..... 17

Record the riflescope serial number here for future reference: \_\_\_\_\_

To locate your serial number:  
**Compact scopes:** On the top of the tube body, in front of the elevation adjustment.  
**Full-size scopes:** On the bottom of the tube body in front of the power change ring.  
 If you have already mounted the riflescope and cannot find the serial number, it is probably covered by the scope rings.


**WARNING!**

*Make sure that your rifle is not loaded before proceeding. Reconfirm that the chamber is empty if you stop the procedure then resume later.*

**NIGHTFORCE™**

Nightforce Optics, Inc.  
 Military, Government & Law Enforcement Business Development  
 1087 E. Franklin Street, Suite D • Hartwell, GA 30643  
 tel 706.377.3186 • fax 706.377.3187  
[www.nightforceoptics.com](http://www.nightforceoptics.com)  
[Militaryinfo@nightforceoptics.com](mailto:Militaryinfo@nightforceoptics.com)  
[LawEnforcementinfo@nightforceoptics.com](mailto:LawEnforcementinfo@nightforceoptics.com)  
[Governmentinfo@nightforceoptics.com](mailto:Governmentinfo@nightforceoptics.com)

- A: Objective Lens
- B: Eyepiece
- C: Eyepiece Lock-ring
- D: Illumination Control and Battery Compartment
- E: Side Parallax Adjustment
- F: Elevation Adjustment
- G: Windage Adjustment
- H: Power Zoom Ring

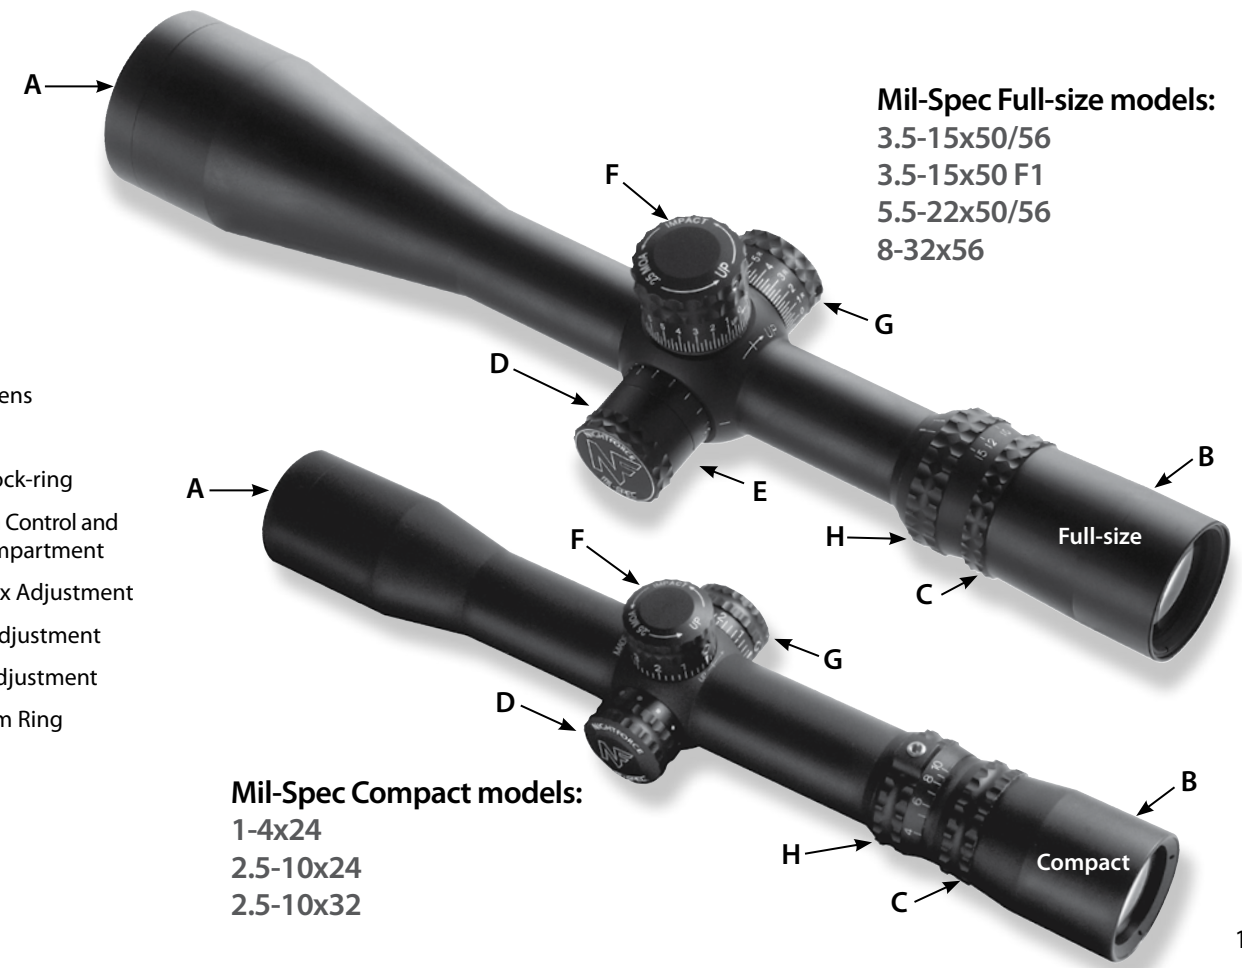

**Mil-Spec Full-size models:**  
 3.5-15x50/56  
 3.5-15x50 F1  
 5.5-22x50/56  
 8-32x56

**Mil-Spec Compact models:**  
 1-4x24  
 2.5-10x24  
 2.5-10x32

## Focusing the reticle

There are two user-adjustable optical settings on Nightforce Mil-Spec riflescopes: the reticle focus and the parallax adjustment.

The Compact Mil-Spec models only have the reticle focus.

The reticle focus is used for setting the reticle focus to match your particular vision. It should not be used to try to focus the target image or to adjust for parallax. If you plan to wear vision correction when shooting, then set this focus while wearing your corrective lenses. The reticle focus should be set before setting the parallax adjustment. If the reticle focus is inadvertently set to the extreme ends of travel it can adversely effect parallax. Record the number of turns you have made on the eyepiece from the original factory setting so you can return to it if needed.

**Note:** All Nightforce riflescopes are factory set for average eye strength, so this adjustment may not be necessary.



### WARNING!

*To avoid permanent eye damage or blindness, do not look directly at the sun or other extremely bright lights through the rifle scope.*

1. Set the power zoom ring at the highest magnification.
2. On riflescopes with parallax adjustment, set it to the infinity setting [ $\infty$ ].
3. Look through the rifle scope eyepiece at a light colored background such as a white wall, overcast sky, or drape a thin white cloth over the objective to eliminate background clutter. Determine if the reticle is clear and in focus instantly when you look through the eyepiece. Be aware that staring at the reticle for more than one or two seconds during this process will cause your eye to compensate, resulting in a false indication of reticle focus. Look away for a few seconds then retry for best results. You are looking for a sharp, crisp and well defined reticle image.
4. If adjustment is necessary, follow the steps outlined for the type of Nightforce rifle scope you have. Due to the way the human eye focuses, best results are usually obtained by turning the eyepiece inward until the reticle is slightly blurred then moving it outward until sharp focus is obtained. Refer to Figure 1.

### Reticle Focus Adjustment — Mil-Spec Riflescopes

Grasp the eyepiece with one hand and the locking ring with the other and rotate the eyepiece counter-clockwise, turning it away from the lock ring while holding the lock ring, power zoom ring and the rifle scope to keep them from turning with the eyepiece.

Several turns of the eyepiece may be necessary to achieve any measurable difference. To achieve an out-of-focus starting point for your vision, you may need to turn the lock ring several turns toward the objective lens first, then turn the eyepiece in the same direction as needed to achieve an out-of-focus position.

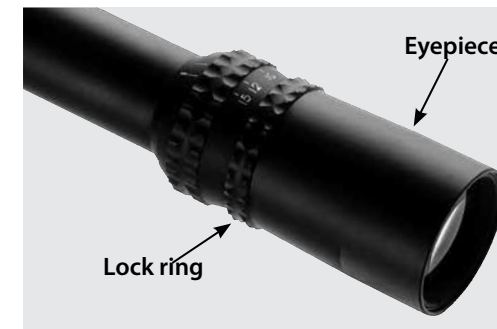


Figure 1:  
Reticle focus

Once the desired reticle focus is achieved, lock the eyepiece in place by turning the lock ring into firm contact with the eyepiece while holding the eyepiece in position. Tighten the lock-ring against the eyepiece so that the eyepiece, lock ring and power zoom ring move as a single unit (full-size Mil-Spec models only).

## Parallax adjustment

Full-size Nightforce Mil-Spec models with 3.5-15x or greater magnification have parallax adjustment mechanisms. The Mil-Spec Compact models, due to their intended use at closer ranges, their ultra-compact design, wide angle of view and lower magnification do not have this feature.

Parallax is the apparent movement of the reticle in relation to the target as the shooter moves his eye across the exit pupil of the rifle scope, caused by the target and the reticle being on different focal planes. A nod of the head up and down will quickly determine if parallax is present. If parallax has been eliminated, the reticle will remain stationary in relation to the target regardless of head placement.



Figure 2:  
Parallax  
adjustment dial


**Note:** As distance to the target increases, so does the potential for parallax-induced sighting error.

Full-size Mil-Spec models, 3.5-15x and higher, have a side parallax adjustment that also doubles as the reticle illumination switch. It is found on the left side of the riflescope (as seen from the operating position/eyepiece end) directly opposite the windage adjustment.

## Click values

When making elevation and windage adjustments, you need to understand how much each click value movement affects bullet impact at various ranges. See Figure 3. Depending on the model, your riflescope is going to have click values as follows:

- Mil-Spec scopes with MOA adjustments are calibrated in 1/4 (0.250) MOA increments. All Nightforce MOA adjustments provide true MOA measurements.
- Mil-Spec scopes with Mil-Radian adjustments are calibrated in 1/10th mil clicks, or 1cm at 100 meters.

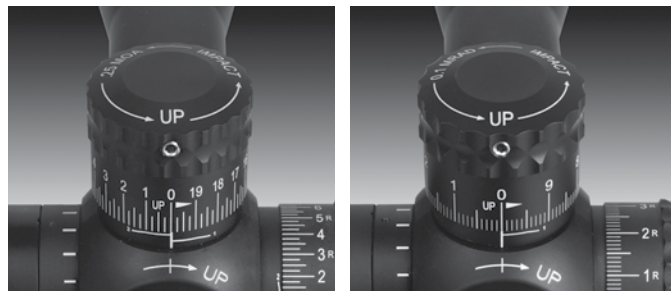

**Figure 3:** .250 MOA adjustments (left), .1 Mil-Radian adjustments (right) on Full-size models



**Compact models**



For detailed instructions on setting adjustments on Nightforce scopes with ZeroStop™, visit [www.nightforceoptics.com](http://www.nightforceoptics.com)

## Reticle illumination

All Nightforce riflescopes are equipped with illuminated reticles. The illumination can be used to make the reticle more visible in low light situations or against darker targets. The intensity of the illumination is adjustable for varied conditions. See Figure 4.

Instructions for the three types of illumination follow. Depending on the intensity and conditions, your battery can last up to 720+ hours of continuous use. For all models, replace depleted batteries with an Energizer® CR2032 or equivalent. Install the battery with the positive (+) side up. Don't forget to turn off the illumination when not in use to prevent depletion of the battery. See Figure 5.

**Figure 5: Battery replacement**




**Full-size Mil-Spec**



**Compact**


**Figure 4: Illumination control**

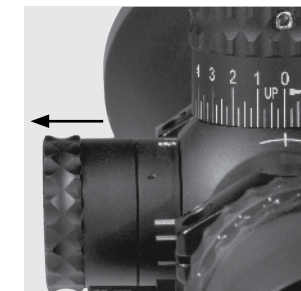

**On/off for Full-size Mil-Spec: Pull cap outward to activate illumination**



**On/off and intensity control for Compact models**

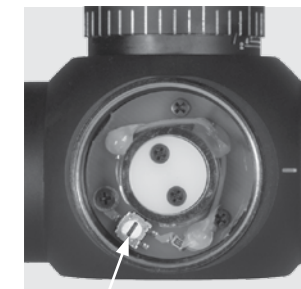

**Intensity control for Full-size Mil-Spec**

**Compact models** have two settings for use with night vision equipment forward of the "off" position and nine other settings behind the "off" position.

## Compact Mil-Spec models

The illumination switch and the intensity level for the Compact riflescope is controlled by the adjustment on the left side of the riflescope. The graphic icons on the adjustment indicate greater or lesser intensity positions, to include two night vision device settings, plus the off position. The adjustment can be turned in any direction to the off point or to the desired intensity setting.

The battery is found underneath the threaded cap on the illumination adjustment. To remove the cap, twist the top portion of the knurled ring counterclockwise while holding the bottom portion of the knurled ring still. See Figure 5, page 5.

## Full-size Mil-Spec models

These riflescopes combine the parallax adjustment, reticle on/off switch, battery compartment and the illumination intensity adjustment dial in a single adjustment on the left side of the riflescope.

To turn the illumination on, simply pull out on the adjustment until it clicks into the on position. To turn it off, push it back into the original position.

The battery is held underneath the adjustment cover, which is removed by turning the top part of the adjustment counterclockwise until the cover comes off.

Adjusting the intensity of the illumination is done by turning the small dial found underneath the battery with a small flat blade screwdriver (see Figure 4, page 5). Be very gentle when adjusting the intensity setting. It is a sensitive component that can be easily damaged if turned past the stops. A very slight movement will make a large change in brightness. **Turning the screw counter-clockwise will increase the brightness.**

The reticle brightness is set at the factory for most **low light** situations. If the intensity is set in a daylight location it will be excessively bright in low light situations. If you need to adjust the brightness, make the adjustment in the lowest light conditions in which you intend to shoot.

Turn on the illumination then remove the cover and the battery. See Figure 5, page 5. With the cover off, hold the battery in place, contacting the side of the battery housing with battery to complete the circuit (this is so you don't have to reinstall the cap during your various changes in illumination adjustments). Adjust until it just begins to produce light flare around the reticle lines. This will usually be ideal for low light field situations.

## Installing the riflescope

**FAILURE TO PROPERLY INSTALL THE RIFLESCOPE MAY CAUSE DAMAGE AND VOID THE WARRANTY.**

**Note: Record the serial number of your riflescope on the Warranty Card at the end of this manual, and at the front of this owner's manual for future reference. Once the scope has been installed you may not be able to read the serial number without removing the riflescope from the rifle.**

### Nightforce torque specifications

- Base attachment screws - 25 inch pounds
- Ring top screws - 25 inch pounds
- Ring crossbolt nut - 68 inch pounds

### Ring and base selection

Your riflescope and rifle are only as good as the link between them. The mounting of your riflescope is as important as the bedding of the rifle's action to the stock. To ensure the highest level of performance, the following steps in the mounting procedure must be followed as described.

We recommend Nightforce bases, rings or Nightforce one-piece mounts for a solid and precise installation. Please use the following guidelines to select the proper mounting solutions for your rifle.

- A high quality ring and base combination using a 1913 Mil. Std. type rail is recommended for field use and/or high-recoil applications. Nightforce rings, bases, Unimounts and one-piece mounts are ideal for virtually all applications.
- Under no circumstances do we recommend the use of turn-in style rotary/dove tail type ring and base designs, especially those equipped with windage adjustment.
- If we do not offer a ring/base combination that is compatible with your firearm, please consider using Talley Manufacturing or Warne products.

**WARNING!**



***Make sure that your rifle is not loaded before proceeding. Reconfirm that the chamber is empty if you stop the procedure then resume later.***

### Mount Installation

**Note: Do NOT lap the Nightforce Unimount, Direct Mount or Ultralite Rings. Other ring/base combinations may or may not require lapping. If you are not comfortable with the lapping procedures that follow you may wish to have this procedure done by a competent gunsmith.**

## Attaching the base to the action

Once you have determined that the base-to-action mating is acceptable, install the base to the action, torquing the mounting screws to the manufacturer's specifications.

## Attaching rings to base

Install the rings on the base per the manufacturer's specifications using the proper torque on the locking mechanism. Avoid positioning the rings where they will make contact with the adjustment assembly, the objective bell section, or the power zoom ring on the riflescope body. Apply forward pressure to the ring while tightening it in place to keep the cross bolt on the ring in firm contact with the forward surface of the cross slot in the base.

With Nightforce rings and one-piece bases you should not need to lap the rings. With other brands lapping may be required. If the scope lays into the rings stress-free, there is no need to lap the rings. If required, we recommend lapping be done by a qualified technician or gunsmith. Do not overlap the rings. Damage to the scope from improper lapping/installation is not covered by the warranty.

Clean/degrease the inside of the rings and the clean the outside of the scope tube before installing in the rings.



### WARNING!

*With hard-recoiling rifles, serious injury or even death can result from eyepiece impact with the shooter under fire. Be certain that your installation provides sufficient eye relief for the recoil generated by your rifle before firing a shot. Remember that shooting uphill, especially in the prone position, can dramatically reduce eye relief. With magnum rifles you should have the eye relief checked by a competent gunsmith.*

## Mounting the riflescope

1. For initial fitting of the riflescope to the rifle set the Nightforce riflescope to the highest magnification. Place the riflescope in the lower portion of the rings as far forward as possible. Install both ring tops. Tighten ring top screws with just enough tension to hold the riflescope where positioned, while still allowing smooth movement fore and aft and rotationally.
2. Hold the rifle in your normal shooting position with the riflescope positioned fully forward in the rings. Place your head as far forward on the stock as you might position it in field use. Slowly move the riflescope back just to the point where the full field of view is obtained. It is recommended to mount the riflescope at this position with as much eye relief as possible (3.5"–4") or slightly forward to ensure maximum eye relief. See Figure 6.

*Note: Eye relief will change with the thickness of the clothing you wear and may need to be readjusted.*

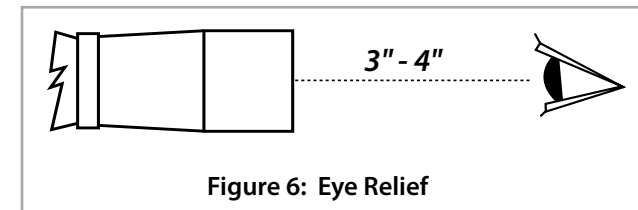


Figure 6: Eye Relief

## Leveling the reticle

For precision shooting, the reticle and the rifle need to be squared, or plumb, to each other. Any out of square condition can cause sighting errors that will be magnified even more at longer distances.

The reticle in all Nightforce scopes is confirmed plumb with the flat surface on the bottom of the adjustment saddle. See Figure 7. You can use pin gauges, a sliding sine bar or flat shims to align the flat surface with the top of the scope rail. To level the reticle using a plumb line, follow the three steps that follow.

1. Level the rifle on a steady rest such as sandbags or a stable shooting rest. This can be accomplished with a bubble level attached to the riflescope base, or on a flat section of the action.
2. Use a plumb line or some other known plumb vertical line at a distance from the rifle where you can see it clearly through the

riflescope. A distance of 100 yards/meters is recommended, but good results can often be obtained as close as 50 yards.

3. Center the reticle on the plumb line and rotate the riflescope in the rings until the vertical line of the reticle is parallel with the plumb line. Recheck the rifle level and adjust the reticle position as needed. When both the rifle and the reticle are plumb, **tighten all ring top screws evenly** until the riflescope is secure in the rings. Recheck the rifle and reticle one more time for plumb, adjust as needed, then torque the screws to the recommended torque settings. Your Nightforce riflescope is now properly mounted.

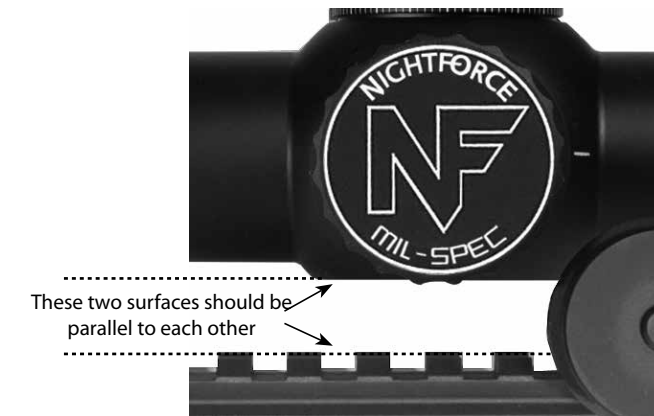


Figure 7

## Establishing a close-range zero

The quickest way to get on paper with a new installation is to first bore sight the riflescope. A simple yet reliable method is by looking through the bore at a round, high contrast target, approximately 5"–6" in diameter, that can be seen clearly with the naked eye at 100 yards/meters yet is small enough to "float" in the center of the rifle bore when viewed through the opened action. This can save you time and ammunition.

1. Remove the bolt, place the rifle on a steady rest and adjust the riflescope to be parallax-free for the distance to the target. See the **Parallax Adjustment** section on page 3.
2. Looking through the bore from the action end, center the round target downrange so that it is floating in the center of the bore, then adjust the elevation and windage adjustments until the reticle is centered on the target while the target is still centered in the bore. See Figure 8.
3. If you feel confident in the bore sighting, proceed to live firing at 100 yards/meters (or the distance you have chosen for your close range zero). Firing one shot at a large target background printed with a 1" grid will allow you to easily spot the bullet hole and quickly determine the number of clicks needed for adjustment. If that first shot isn't on the target, recheck your bore sighting and/or move the target to 25 yards if necessary to get a shot on the paper.

4. Without changing the adjustments, move the rifle to center the reticle on the target. Carefully turn the windage and elevation adjustments without moving the rifle, until the reticle is aligned on the center of the bullet hole from that first shot on the target.
5. Fire at least a three-shot group at the desired close-range zero distance, then fine-tune your zero as needed.

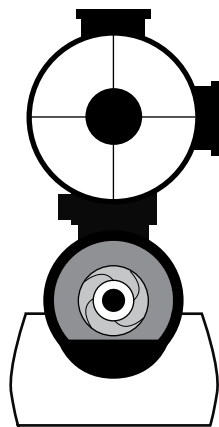


Figure 8

## Zeroing adjustments


The elevation and windage adjustments can be set to the zero position on the number dial once you have zeroed the riflescope. To do this, loosen the set screws on the elevation and windage adjustments using the supplied Allen wrench, allowing the dial to turn freely without changing the actual setting. Align the zero point on the number scale engraved in the adjustment with the center line engraved on the rotation scale underneath the adjustment.

Keep downward pressure on the knob while locking it in position with the Allen wrench, holding the wrench only by the short end when tightening. Do not overtighten to prevent damaging the components inside (approx. 15 inch pounds).


### Multiple range testing

Using the Nightforce Ballistic Software can be a big time saver in this process. It can also give you precise adjustments based on the known bullet, velocity and atmospheric data to get you on the target with the first shot at surprisingly long distances, without first range testing at that distance.

Figure 9: Adjustment Zero

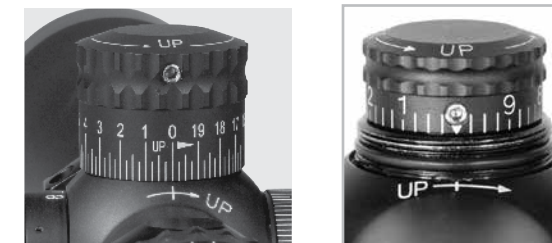

Full-size models

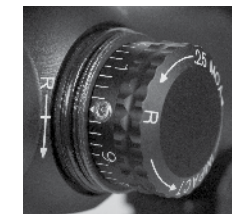

Compact models

## ZeroStop™ Elevation Adjustment Instructions 15x, 22x, 32x Full-Size Models

1. Prior to installing your Nightforce riflescope or making any adjustments to the ZeroStop™ feature, **MAKE SURE FIREARM IS UNLOADED!**
2. REPEAT STEP # 1!
3. After you have properly installed your riflescope, you can then proceed to zero/sight-in your rifle.
4. After you have determined the ammunition that performs best for your intended use and established the zero/sight-in, please follow the instructions that follow.

- A. Remove elevation turret cap by loosening the two set screws 1½ to 2 turns. Take care not to remove the screws entirely or lose them. See Figure 1.
- B. Lift the cap upward with a slight twisting motion to remove it from the body. You should feel slight resistance. Set the cap aside on a clean surface.  
Note: You should not feel any “clicks” during twisting motion. If you do, loosen the set screws an additional ½ turn.
- C. You have now exposed the ZeroStop™ clutch assembly. Take care to maintain the cleanliness of the inside of the cap and the clutch area.
- D. Loosen each of the four Allen head screws on the ZeroStop™ clutch assembly 1½ to 2 turns counter clockwise. **DO NOT** remove the screws from the clutch assembly. See Figure 2.

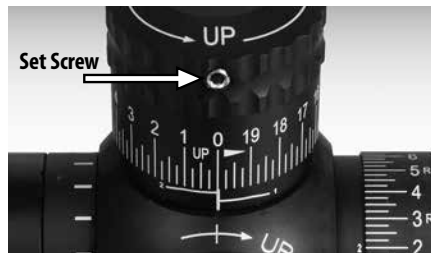


Figure 1

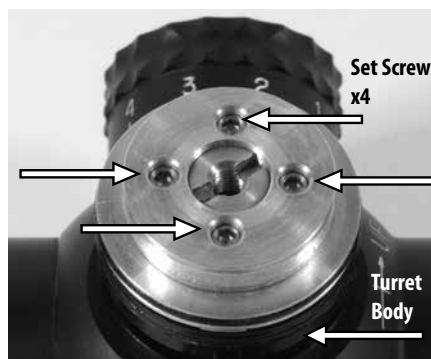


Figure 2

- E. To set the ZeroStop™ clutch assembly, rotate the upper clutch face downward/clockwise until it is firmly against the lower clutch face. See Figure 3.

Note: You should not feel any “clicks” or resistance while making this adjustment.

- F. While holding the clutch mechanism in position, tighten the four Allen head locking screws on the clutch assembly evenly in an “X” pattern. Do not over-tighten the screws. Tighten one screw until you feel slight resistance, then move to the next screw in the “X” pattern. Continue to do the same for all four screws. Once all screws have been tightened to that point, repeat the same pattern, tightening all to 4 inch-pounds. If no calibrated torque driver is available, hold the short end of the Allen wrench to tighten the screws and only use your thumb and finger to turn the wrench. See Figure 4.

- G. To reinstall the turret cap, center it over the turret body, and press down lightly while turning the turret cap clockwise until it moves into position. Keep downward pressure on the turret cap as it will tend to move up due to the compressed air resistance created by the O-ring seal. Align the “0” index mark on the engraved scale of the turret cap with the center line on the scope body and tighten the two set screws to 60 inch-ounces or 3.75 inch-pounds. If no calibrated torque driver is available, hold the short end of the Allen wrench between your thumb and finger to turn the wrench, and tighten the two set screws. See Figure 4.



Figure 3



Figure 4



# ZeroStop™ Elevation/Windage Limiter™ Adjustment Instructions

## Compact Models

Prior to installing your Nightforce riflescope or making any adjustments to the ZeroStop™ feature, **MAKE SURE FIREARM IS UNLOADED!**

### 1-4x

1. Use the elevation and windage turrets to zero the riflescope at the desired range. If you need additional travel than the stops will allow, loosen the set screw on the turret 1¼ turns and rotate the knob in the opposite direction from which the stop was engaged until you hit the stop point. See Figure 2. While holding it against the stop, retighten the set screw to 5 inch pounds. You should not feel any clicks when making this adjustment. If you do, the set screw is too tight. Continue with the zeroing process and repeat as necessary to gain additional turret travel.

2. Once your desired zero has been achieved, loosen the set screw again 1¼ turns and turn each turret until the “0” is aligned with the index mark on the scope body.

a. The elevation turret will hit the stop and will not move clockwise beyond the “0” on the number scale when turned clockwise with the set screw loose.

b. For the windage turret, you will need to visually align the “0” with the index mark on the scope body because the stop position is ½ turn away from the zero position. See Figure 3.

3. With the turrets in the “0” position, apply downward pressure on the turret and tighten the set screw to 5 inch pounds. See Figures 1 and 2.

### 2.5-10x

The 2.5-10x elevation ZeroStop™ allows full use of the available up elevation travel for longer target engagement distances. The Windage Limiter™ allows ½ revolution in either direction from the established zero position.

Note: The O-rings inside the turret assembly and under the turret set screw must remain in place and must be lubricated in order to maintain the waterproof integrity of the riflescope.

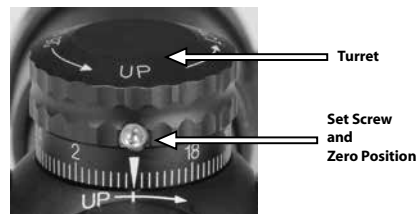


Figure 1

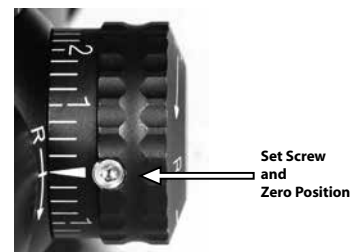


Figure 2

1. Use the elevation and windage turrets to zero the riflescope at the desired range. If you need additional down travel for the elevation turret see 2.5-10x step 2. To obtain additional windage turret travel, see 2.5-10x step 4.

2. Remove the elevation turret by loosening the set screw 1¼ turns and remove it by turning it clockwise and lifting upward. See Figure 1.

3. Loosen the set screw on the elevation ZeroStop™ clutch assembly 1½ turns and reinstall the elevation turret, leaving the ZeroStop™ clutch assembly set screw loose. Tighten the elevation turret set screw to 5 inch pounds. See Figure 3 and Figure 1.

4 Depending on the position of the ZeroStop™ clutch assembly, you may need to free up more downward elevation travel to obtain the desired zero. Follow steps a through c to obtain additional downward travel.

a. Turn the elevation turret clockwise until you feel resistance or until the clutch assembly hits the stop shoulder. Do NOT force or damage may occur. Loosen the elevation turret set screw 1¼ turns and remove the turret.

b. Loosen the ZeroStop™ clutch assembly set screw 1½ turns and rotate the clutch assembly clockwise until the bronze elevation screw is flush with the top of the clutch assembly. See Figure 3.

c. Turn the clutch assembly three full revolutions clockwise and then retighten the clutch assembly set screw to 5 inch pounds. You should not feel any clicks when making this adjustment. If you do, the set screw is too tight.

5. If you need additional windage travel than the Windage Limiter™ stop will allow, loosen the set screw on the windage turret 1¼ turns and rotate the knob in the opposite direction from which the stop was engaged, and then retighten the setscrew to 5 inch pounds. You should not feel any clicks when making this adjustment. If you do, the set screw is too tight.

6. Once your desired zero has been achieved, loosen the set screw on the elevation turret and remove the turret. Loosen the set screw on the elevation ZeroStop™ clutch assembly 1½ turns and turn the assembly counterclockwise until it stops against the stop shoulder. See Figure 4. You should not feel any clicks when performing this adjustment. If you do the ZeroStop™ clutch assembly set screw is too tight. While holding the ZeroStop™ clutch assembly against the stop shoulder in a counterclockwise direction, tighten the set screw to 5 inch pounds. See Figure 3 and 4.

7. Reinstall the elevation turret and align the “0” on the turret number scale with the reference mark on the scope body. With downward pressure applied, tighten the set screw on the elevation turret to 5 inch pounds.

8. Loosen the set screw on the windage turret 1¼ turns. Visually align the “0” on the turret number scale with the index mark on the scope body for the windage turret. With the number scale in the “0” position, apply downward pressure to the turret and tighten the set screw to 5 inch pounds. See Figure 2.

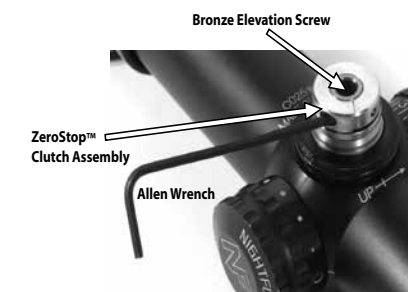


Figure 3

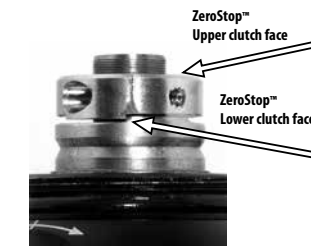


Figure 4

## Caring for your riflescope

With proper care your Nightforce riflescope will give you many years of dependable service.

### Cleaning the riflescope exterior

Clean the riflescope body with a clean cloth lightly moistened with clean water or alcohol. **Do not use strong solvents.** While cleaning your rifle, be sure to protect your riflescope's lenses by installing the covers that came with the riflescope. Ammonia-based bore solvents can destroy the coating on the glass. Avoid spilling gun cleaning solvents anywhere on the riflescope.

In the event of submersion in mud, sand, dirty or salt water, flush the outside of the riflescope with clean water to remove encrusted material and salt. If your riflescope came with screw-on adjustment covers, install them before flushing with water. Wipe the outside metal surfaces dry with a soft cloth then proceed to the "cleaning lenses" step below.

### Cleaning lenses

We recommend using the Nightforce cleaning kit A130 to care for the lenses on your riflescope. The kit contains an ultrasoft brush, microfiber cloth and proprietary cleaning solution.

With the lens facing down, to allow debris to fall away from the surface, remove loose dirt and dust with a gentle air blower and/or a lens brush. If there is grit stuck to the lens that won't come off with the air or a brush, flushing the surface with alcohol or distilled water will prevent that grit from being rubbed into the glass by the cleaning swabs.

Using a soft, clean, lint-free cotton swab or lens cleaning cloth, and lens cleaning fluid applied to the swab, clean the lens starting in the center, working to the outside. Make only one pass in the corner where the glass meets the metal. Once you reach the corners of the lens, do not re-use that swab as it will often contain abrasive grit that will scratch the surface. Start over in the center with a new swab and repeat the process until the glass is clean. Use a very small amount of cleaning solution for the last pass to prevent streaks.

### Long-term storage

If the riflescope will not be used for an extended period of time, remove the battery and store it separately. Keep the riflescope in a cool, dry, dust-free location.

#### WARNING!



*Make sure that your rifle is not loaded before installing or performing any work on your scope. Reconfirm that the chamber is empty if you stop the procedure then resume later.*

## Mil-Spec product warranty

Nightforce Mil-Spec riflescopes have a ten-year warranty, which covers mechanical defects in materials and workmanship in the optical and mechanical components of the riflescope. In the event of a defect in materials or workmanship that is covered by this warranty, we will either repair the riflescope or replace it at no charge, with a comparable product at our discretion.

Exclusions to this warranty include intentional or accidental damage, abuse, misuse, unauthorized modifications or repairs, and improper mounting. This warranty does not cover any consequential or incidental damages resulting from the inability to use the riflescope. Any serial number obliteration or alteration on the product will void the warranty.

The warranty begins on the date the product was purchased by the original owner. **Please note that commercial Nightforce NXS riflescopes used for military applications will not be covered by any warranty.**

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

Before sending a riflescope in for service, please call Nightforce Optics, Inc. at the number below, to determine if the problem can be resolved without sending us the product.

- Remove any mounting rings or accessories other than dust covers and the original shade.
- Record and keep on hand the serial number.
- Include with the riflescope a detailed description of the defect(s), your name, phone number and the address you wish the riflescope returned to.
- Place the boxed or protectively wrapped riflescope in a well-padded outer box, insure it for replacement value and send it shipping prepaid, to the address below.



Nightforce Optics, Inc.  
336 Hazen Lane  
Orfino, ID 83544  
208.476.9814